


Application Tooling Specification Sheet

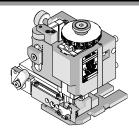

Order No. 63904-0500

FEATURES THIS APPLICATOR IS FOR AUTOMATIC WIRE PROCESSOR USE ONLY.


- Quick punch removal with the push of a button for fast and easy tooling change
- Applicator designed to industry standard mounting and shut height 135.80mm (5.346")
- Quick set-up time; plus the crimp height, track and feed adjustments can be set without removing the applicator from the press
- Fine adjustment allows users to achieve target with little effort by adjusting in increments of .015mm (.0006") for conductor crimp height and .063mm (.0025") for insulation height
- Independent adjustment rings allow users to quickly adjust the conductor or insulation crimp height without affecting each other
- Directly adapts to most automatic wire processing machines

SCOPE

FineAdjust Applicator

Products: SRC Connector using MX150 Receptacle Terminals, 1.00mm² wires.

Terminal Series No.	Terminal	Ordor No	Wire Siz	ze	Insulation	Diameter	Strip Length			
Terminal Series NO.	Terminal Order No.		Wire Type	mm²	mm	ln.	mm	In.		
33001	33001-3004	33001-5002	FLRY-B	1.00	1.90-2.10	.075083	4.70-5.60	.185220		
33012	33012-3002		FLRY-B	1.00	1.90-2.10	.075083	4.70-5.60	.185220		
Ter	Terminals were validated using the following wire specifications: ISO 6722-1, Class B.									

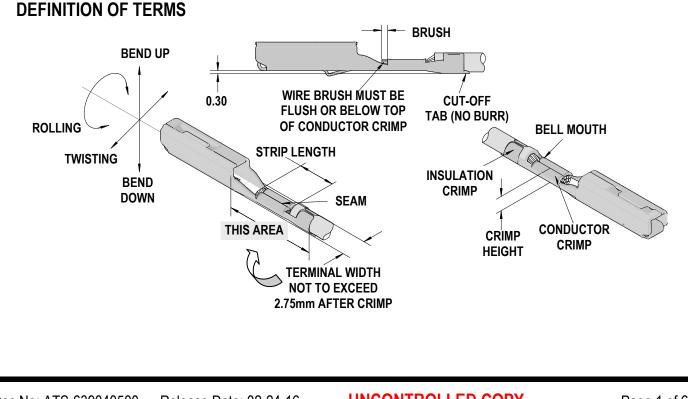

Doc No: ATS-639040500 Revision: A

Release Date: 02-24-16 Revision Date: 02-24-16

UNCONTROLLED COPY

CRIMP SPECIFICATION

Terminal Series No.	Bell n	nouth	Cut-off T	ab (Max)	 Conductor Brush (Max) 	
	mm	ln.	mm	In.	mm	ln.
33001	0.30-0.70	.012028	0.50	.020	0.40	.016
33012	0.30-0.70	.012028	0.50	.020	0.40	.016

Wire brush must be flush or below top of Conductor Crimp.

THIS APPLICATOR IS INTENDED FOR AUTOMATIC WIRE PROCESSOR USE ONLY. It is very important that the brush length is consistently within specification for this sealed connector system to work properly. This applicator should only be run in a properly setup automatic wire processor in order to consistently achieve the brush length. Any attempt to use this applicator outside a properly setup automatic wire processor will likely not meet the brush specification and cause this sealed connector system to not work properly.

Terminal	Pand un I	Twist Roll		Pi	unch W	idth (Re	ef)	O an duatan O ann		
Series No.	Bend up			Conductor		Insulation		Conductor Seam		
Series NO.	Deg	Degree		Degree		In	mm	In	Seam shall not be open and no wire allowed	
33001	3	3	3	3	2.10	.083	2.26	.089	out of the crimping area	
33012	3	3	3	3	2.10	.083	2.26	.089	out of the chiliphing area	

After crimping, the crimp profiles should measure the following:

Terminal			Conductor				Insulation					Pull Force	
Series No.			Crimp Height		Crimp Width		Crimp Height (Ref)		Crimp Width (Ref)		Minimum		
Series NO.	Wire Type	mm ²	mm	ln.	mm	In.	mm	In.	mm	In.	Ν	Lb.	
33001	FLRY-B	1.00	1.25-1.35	.049053	2.05-2.25	.081089	2.35	.093	2.30	.091	120	27.0	
33012	FLRY-B	1.00	1.25-1.35	.049053	2.05-2.25	.081089	2.35	.093	2.30	.091	120	27.0	

Tool Qualification Notes:

- 1. Pull Force should be measured with no influence from the insulation crimp.
- 2. The above specifications are guidelines to an optimum crimp.

Adjusting the Wire Bend Angle:

(See Item11 in parts list and assembly drawing.)


Note: If the <u>Wire Bend</u> is present after crimping use the following method to remove the bend. This tooling may not be necessary for all wire gauges.

- 1. The screw is provided for wire straightening. See Figure 1.
- 2. Loosen the (2) M3 x 5mm long setscrews; see Figure 1, before turning the screw.
- Start by adjusting the screw so it just touches the insulation outside diameter of the wire being crimped. If wire <u>Bend Up</u> exists, turn the screw a quarter turn clockwise (CW) to lengthen it.
- 4. Continue to adjust the length of the screw until the wire appears to be straight after crimping. If wire <u>Bend Down</u> exists, turn the screw a quarter turn counter clockwise (CCW) to shorten it. Continue to adjust the length of the screw until the wire appears to be straight after crimping.
- Tighten the M3 x 5mm long setscrews, when finished adjusting the screw. Two M3 x 5mm long setscrews are provided; the top setscrew is to lock the screw after adjustments. The M3 x 5mm long setscrew on the side of plunger striker is used when making adjustments.

Adjusting the Wire Brush Length

(See Item13 in parts list and assembly drawing.)


- 1. If the wire brush is too long or extends above the top of the conductor crimp, adjust the Wire Stop, Item 13, closer to the conductor punch.
- 2. If the wire brush is too short, adjust the Wire Stop further away from the conductor punch.

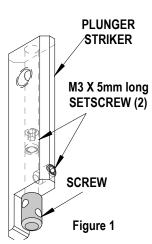

PARTS LIST

FineAdjust Applicator 63904-0500										
ltem	Order No Engineering No. Description									
		Perish	nable Tooling							
	63904-0570	63904-0570	Tool Kit (All "Y" Items)	REF						
1	63444-2137	63444-2137	Conductor Punch	1 Y						
2	63445-2162	63445-2162	Conductor Anvil	1 Y						
3	63454-0048	63454-0048	Insulation Punch	1 Y						
4	63456-0041	63456-0041	Insulation Anvil	1 Y						
5	63443-0037	63443-0037	Cut-Off Plunger	1 Y						
6	63443-0038	63443-0038	Front Plunger Retainer	1 Y						
Other Components										
7	11-17-0022	1739-21	Hold Down Spring	1						
8	11-18-4094	60709A111	Feed Guide	1						
9	63443-0009	63443-0009	Scrap Chute	1						
10	63443-0024	63443-0024	Key	1						
11	63443-0082	63443-0082	Front Plunger Striker	1						
12	63443-0083	63443-0083	Striker Screw	1						
13	63443-0090	63443-0090	Wire Stop	1						
14	63443-0093	63443-0093	Shank	1						
15	63443-1717	63443-1717	Height Spacer (18.70mm)	1						
16	63443-2206	63443-2206								
17	63443-2208	63443-2208	Coarse Spacer (8.00mm)	1						
18	63443-2308	63443-2308	Fine Spacer (3.40mm)	1						
19	63443-6122	63443-6122	Rear Cover							
20	63443-7101	63443-7101	Terminal Hold Down	1						
21	63700-0539	63700-0539	Cut-off Plunger Spring	1						
			Frame							
22	63800-4901	63800-4901	Тор	1						
23	63801-3281	63801-3281	Base	1						
24	63801-4650	63801-4650	Track	1						
24A	63459-0001	63459-0001	Terminal Track	1						
		Н	ardware							
25	N/A	N/A	M3 by 5mm Long SHSS-Brass Tip	2**						
26	N/A	N/A	M3 by 6 Long SHCS	2**						
27	N/A	N/A	M3 by 6 Long FHCS	1**						
28	N/A	N/A	M3 by 8 Long SHCS	1**						
29	N/A	N/A	M4 by 6 Long SHCS	2**						
30	N/A	N/A	M4 by 12 Long BHCS	2**						
31	N/A	N/A	M4 by 50 Long SHCS	2**						
32	N/A	N/A	M5 by 12 Long SHCS	1**						
33	N/A	N/A	#10-32 by 3/8"Long Flat Point SSS	1**						
34	N/A	N/A	#10-32 Hex Jam Nut	1**						
*		n an industrial supply	y company such as MSC (1-800-645-7	270).						

Release Date: 02-24-16 Revision Date: 02-24-16

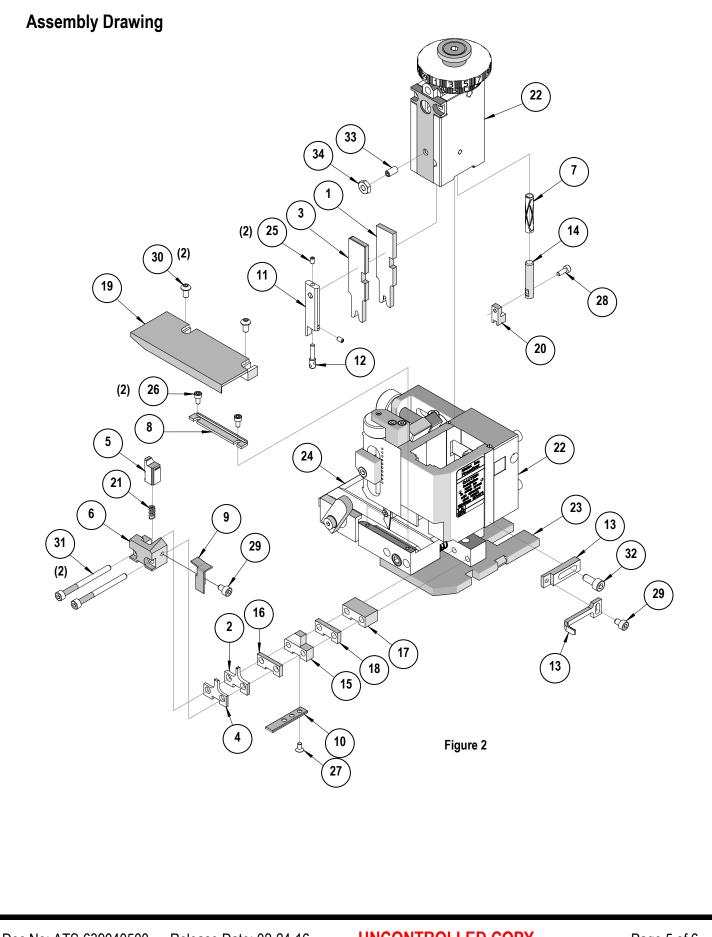

Doc No: ATS-639040500 Revision: A


Release Date: 02-24-16 Revision Date: 02-24-16 **UNCONTROLLED COPY**

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press and Applicator before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. Wear safety glasses at all times.
- 5. For recommended maintenance refer to the FineAdjust Manual.

Insulation Attribute Notes:

In order to help ensure the integrity of the connector seal, the design intent is to partially bury the insulation grips into the wire insulation. Due to this, skiving of the insulation may occur. This skiving attribute is acceptable. Below are examples of insulation skiving that may be seen with this connector system.

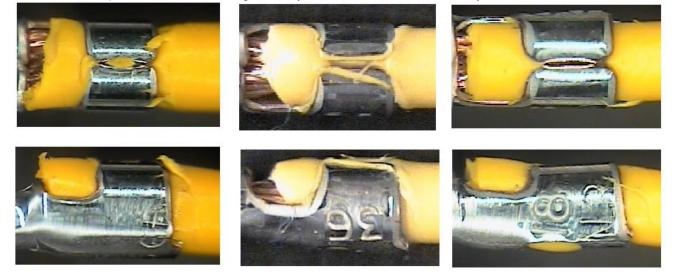

CAUTION: This applicator should only be used in a press with a shut height of 135.80 mm (5.346"). Tooling damage could result at a lower setting.

CAUTION: To prevent injury never operate this Applicator without the guards supplied with the press or wireprocessing machine in place. Reference the press or wire processing manufacturer's instruction manual.

CAUTION: These Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling qualified by Molex. When using non-Molex tooling with this specific connector system listed in this document, the Molex qualification does not apply and the responsibility for full qualification of the connector system is that of the customer. Molex accepts no liability for tooling support where non-Molex tooling is used.

Visit our Web site at http://www.molex.com

Doc No: ATS-639040500 Revision: A Release Date: 02-24-16 Revision Date: 02-24-16 **UNCONTROLLED COPY**